INSTALLATION STEPS

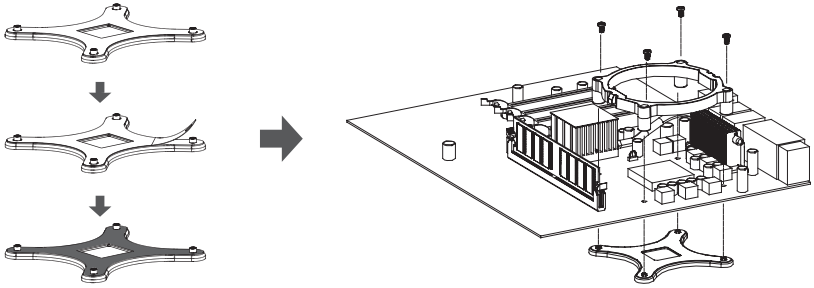

1 Peal off the adhesive from③Back plate. Adhere③Back plate onto the back side of M/B.
Use①Screw to fasten④Bracket, M/B and③Back plate.

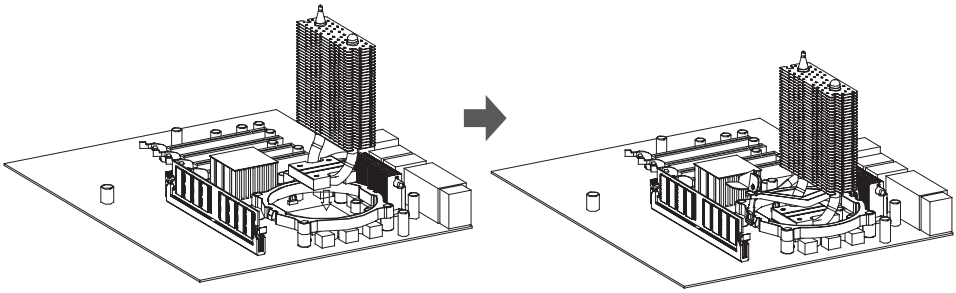

2 Set the Heat-sink on the CPU, and use②K8/AM2 Clip to fasten Heat-sink on the ④ Bracket

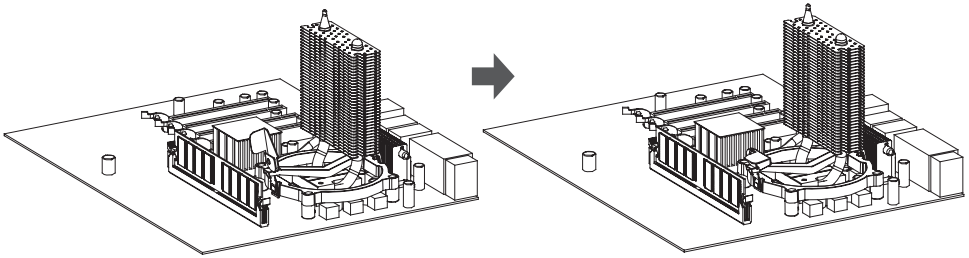

3 Fasten the one side (which is able rotating) of ② K8/AM2 Clip to ④Bracket

XIGMATEK
http://www.xigmatek.com
E-mail: support@xigmatek.com sales@xigmatek.com

2008 © XIGMATEK Co., Ltd. All rights reserved. All trademarks are the property of their respective owners.